



CLEANING INSTRUCTIONS

FLEET-AIR FILTERS INC., IS NOT LIABLE IF DAMAGE OCCURS DUE TO POOR INSTALLATION AND/OR MAINTENANCE BY THE END USER.

MAKE SURE YOU FOLLOW THE PROPER REMOVAL AND INSTALLATION INSTRUCTIONS THAT FIT YOUR APPLICATION ANY TIME YOUR FLEET-AIR FILTER IS SERVICED. FAILURE TO DO SO COULD RESULT IN A POOR SEAL, AND CAUSE DAMAGE TO THE ENGINE.

FLEET-AIR FILTER SYSTEMS ARE DESIGNED TO MAXIMIZE AIR FLOW SO THAT YOUR ENGINE ACHIEVES IT'S MAXIMUM PERFORMANCE. THE FILTERS WORK ATTRACTING NEGATIVELY CHARGED DUST PARTICLES TO THE POSITIVELY CHARGED FOAM. THE OIL APPLIED TO THE FOAM CAUSES THE POSITIVE CHARGE, AND THE DUST IS NEGATIVE IN CHARGE. THIS IS A STATIC ELECTRICITY PHENOMENA.

1. REMOVE THE OUTER AND MIDDLE FILTER JACKETS BY LOOSENING THE VELCRO. DO NOT REMOVE THE INNER FILTER IT SHOULD REMAIN ATTACHED.
2. PLACE THE OUTER JACKET IN A LARGE CONTAINER AND WASH WITH MILD SOAP(DAWN DISHWASHING SOAP) AND WATER FOR WASHING. THE MIDDLE JACKET SHOULD BE CLEANED IN THE SAME MANNER. DO NOT REMOVE THE INNER FILTER, SIMPLY RINSE CORE WITH REGULAR WATER PRESSURE(NO HIGH PRESSURE OR POWER WASHER) AND REPEAT PROCEDURE AS NECESSARY.
3. GENTLY REMOVE EXCESS WATER BY COMPRESSING THE FOAM(DO NOT TWIST OR WRING OUT THE WATER). ALLOW ALL PIECES TO FULLY DRY.
4. APPLY KLOTZ FOAM AIR FILTER SPRAY OIL #606 ONLY TO THE INNER FILTER SURFACE AND RUB GENTLY WITHOUT CAUSING DAMAGE TO THE CORE.
5. APPLY KLOTZ OIL FOAM AIR FILTER SPRAY OIL #606 ONLY TO THE INSIDE OF BOTH JACKETS AND VELCRO STRIPS.
6. REINSTALL THE OUTER JACKETS(THE MIDDLE JACKET IS ABOUT 1/2" SMALLER THAN THE OUTER JACKET) AND SEAL THE VELCRO. BE SURE TO TUCK THE FOAM LAYER INTO THE TRIM.
7. REINSTALL YOUR FLEET-AIR FILTER(INSTRUCTIONS WERE INCLUDED WHEN YOU PURCHASED) INTO YOUR TRUCK HOUSING.

ALL DRIVING CONDITIONS MUST BE CONSIDERED ON MAINTENANCE OF ALL VEHICLES. IF YOU ARE DRIVING IN VERY DIRTY CONDITIONS YOU WILL NEED TO CLEAN YOUR FILTER MORE THAN A TRUCK THAT IS IN CLEANER CONDITIONS. YOU MUST SERVICE AND OIL YOUR FLEET-AIR FILTER ON A REGULAR BASIS TO PROTECT YOUR ENGINE AND GET THE MOST OUT OF YOUR FLEET-AIR FILTER.



UNPACKING INSTRUCTIONS

INSPECT ANY FILTER BEFORE
INSTALLING INTO TRUCK!
MAKE SURE THERE IS NO
PACKING MATERIALS INSIDE
OR OUTSIDE OF FILTER!

PHONE: 251-654-0892 ~ 6220 THEODORE DAWES RD., THEODORE, AL 36582
WEBSITE: FLEET-AIRFILTERS.COM ~ EMAIL: FLEETAIRFILTERS@YAHOO.COM



REMOVAL AND INSTALLATION INSTRUCTIONS

MAKE SURE YOU FOLLOW THE PROPER REMOVAL AND INSTALLATION INSTRUCTIONS THAT FIT YOUR APPLICATION ANY TIME YOUR FLEET-AIR FILTER IS SERVICED. FAILURE TO DO SO COULD RESULT IN A POOR SEAL, AND CAUSE DAMAGE TO THE ENGINE

REMOVAL AND INSTALLATION FOR UNDER-HOOD HOUSING:

1. REMOVE AIR FILTER HOUSING COVER.
2. REMOVE FILTER FROM HOUSING.
3. MAKE SURE HOUSING AND HOUSING NIPPLE IS CLEAN BEFORE INSTALLING YOUR FLEET-AIR FILTER.
4. REMOVE YOUR FLEET-AIR FILTER FROM THE BOX AND ANY PACKAGING (FILTER IS PRE-OILED AND READY FOR INSTALLATION).
5. APPLY A SMALL AMOUNT OF VASELINE TO THE INSIDE OF THE RUBBER SEAL FOR EASE OF INSTALLING.
6. SLIDE YOUR FLEET-AIR FILTER ONTO HOUSING NIPPLE, MAKE SURE YOUR FLEET-AIR FILTER HAS A PROPER SEAL AND NOT LOOSE FITTING.
7. REINSTALL AIR FILTER HOUSING COVER.



READ BEFORE INSTALLING

FLEET-AIR FILTERS INC., IS NOT LIABLE IF DAMAGE OCCURS DUE TO
POOR INSTALLATION AND/OR MAINTENANCE BY THE END USER.

IF YOU ARE UNSURE IN HOW TO CHANGE YOUR
AIR FILTER PLEASE HAVE A PROFESSIONAL
MECHANIC INSTALL

PHONE: 251-654-0892 ~ 6220 THEODORE DAWES RD., THEODORE, AL 36582
WEBSITE: FLEET-AIRFILTERS.COM ~ EMAIL: FLEETAIRFILTERS@YAHOO.COM



PRODUCT WARRANTY

THANK YOU FOR PURCHASING A FLEET-AIR FILTER!!!

FLEET-AIR FILTERS PURCHASED FROM FLEET-AIR FILTERS AND/OR OUR DEALERS ARE BACKED BY A LIMITED LIFETIME WARRANTY WHEN USED ON VEHICLES FOR WHICH THEY WERE DESIGNED, AS LONG AS YOU ARE THE ORIGINAL PURCHASER OF THE FLEET-AIR FILTER. IF YOUR FLEET-AIR FILTER FAILS WE WILL REPAIR OR REPLACE YOUR FLEET-AIR FILTER. FLEET-AIR FILTERS IS NOT LIABLE IF DAMAGE OCCURS DUE TO POOR INSTALLATION AND/OR MAINTENANCE BY THE END USER. THIS INCLUDES YOUR ENGINE AND ANY PARTS ASSOCIATED WITH YOUR ENGINE. IF DAMAGES OCCUR DUE TO A PROPERLY INSTALLED AND MAINTAINED FLEET-AIR FILTER THE AMOUNT FOR REPAIRS WILL NOT EXCEED THE PRICE OF THE FLEET-AIR FILTER.

INCORRECT CLEANING OR USAGE VOIDS WARRANTY

FLEET-AIR FILTERS SHOULD BE CLEANED AT LEAST EVERY 50,000 MILES FOR NORMAL HIGHWAY USE, MORE FREQUENT IN DIRTY (SNOW, SALT, DUSTY OR OFF-ROAD) CONDITIONS. CLEANING SHOULD BE WITH DAWN DISH SOAP OR MILD LIQUID DETERGENT AND WATER. AFTER CLEANING IT SHOULD BE RE-OILED WITH KLOTZ 606 FOAM FILTER OIL ONLY. YOUR FLEET-AIR FILTER WILL NOT BE COVERED BY OUR WARRANTY IF: 1) THE END USER INSTALLS THE FILTER INCORRECTLY; 2) IS INCORRECTLY CLEANED (BY COMPRESSED AIR, ANY CHEMICALS, AND POWER WASHER.). ANY DAMAGED, ABUSED, OR MODIFIED FLEET-AIR FILTERS WILL NOT BE WARRANTED.

REPLACEMENT

TO RETURN A FLEET-AIR FILTER YOU MUST CONTACT FLEET-AIR PRIOR TO RETURN AT THE CUSTOMERS' EXPENSE. CALL US AT 251-654-0892 OR EMAIL US AT FLEETAIRFILTERS@YAHOO.COM.

EXTENT OF WARRANTY

ANY DEFECTIVE FLEET-AIR FILTER PROPERLY RETURNED TO FLEET-AIR WILL BE REPAIRED OR REPLACED. FLEET-AIR RESERVES THE RIGHT TO DETERMINE WHETHER THE TERMS OF WARRANTY, SET OUT ABOVE, HAVE BEEN PROPERLY COMPLIED WITH. IN THE EVENT THAT THE TERMS ARE NOT COMPLIED WITH, FLEET-AIR SHALL BE UNDER NO OBLIGATION TO HONOR THIS WARRANTY. FLEET-AIR WILL NOT BE RESPONSIBLE FOR ANY INDIRECT, CONSEQUENTIAL, SPECIAL, CONTINGENT, OR OTHER DAMAGES.