

# Xtreme Friction Fighter Usage Guidelines

**Engines** – Add 2 oz. per quart of oil to start, then 1 oz. per quart on subsequent oil changes

**Automatic Transmissions** – Add 2 oz. per quart of 90 weight gear oil and above. Retreat at service intervals.

**Wheel Bearings** – Add 1 part Xtreme to 20 parts grease, mix well then pack bearings with the mixture.

**U-Joints** - Add 1 part Xtreme to 20 parts grease, mix well. Clean the lubricating nipples, then pack treat the joint with the mixture.

**Differentials** – Add 2 oz. per quart in oils less than 80 weight, 4 oz. per quart in oils 90 weight and above.

**Fuel** – Add 1 oz. to the fuel tank with each oil change.

**Power Steering Units** – Add 2 oz. to existing fluid.

**A/C Units** – Add 1 oz. at each full changing.