



RIG MATTERS, INC.

INSTALLATION INSTRUCTIONS



By Rig Matters, Inc.


40550 FLD 120 HEADLIGHTS INSTALLATION GUIDE




Hood type FLD 120 OR 112




Step 1: Original headlight installed.

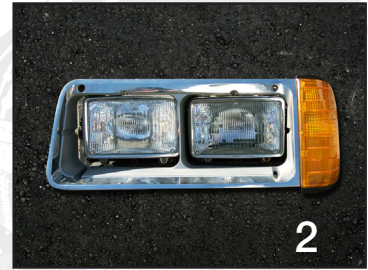

Step 2: Original headlight removed.

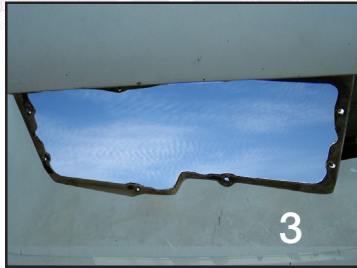



Step 3: Headlight hole.

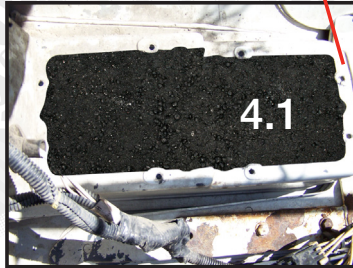


Step 4: Back of hood headlight hole with original mounting holes.

Holes

Screws

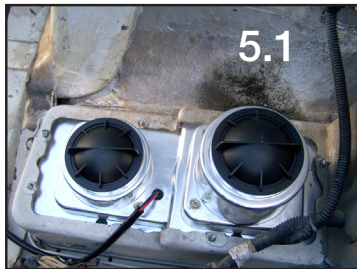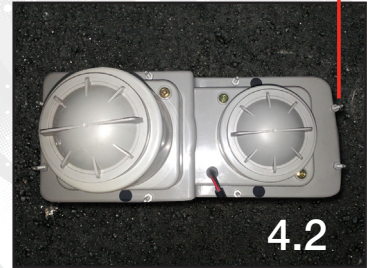

Step 5: Insert 40550 into original hood hole and mount on original mounting holes. Make sure turn signal light plug is properly installed.

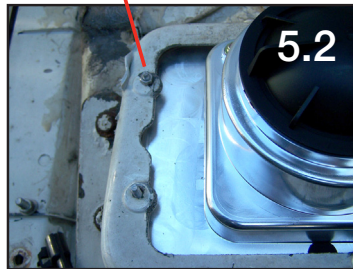

Tighten with nut



Step 6: Final look-40550 installed. Headlights should align and fit flush with hood.

Note: Examples of not proper installation of headlights. If installed in this manner water damage will occur and no warranty will be given.



Made in Taiwan

RIG MATTERS, INC.

3700 CAPITOL AVE.
CITY OF INDUSTRY, CA 90601
TEL 562.699.5313 FAX 562.699.3193

www.rigmattersinc.com