

### INSTALLATION INSTRUCTIONS

- 1- TEMPORARILY ATTACH BRACKETS TO THE BACKSIDE OF THE DEFLECTOR WITH HARDWARE AS ILLUSTRATED.
- 2- SLIP ON CHROMED TRIM EDGE TO BOTTOM EDGE OF THE HOODDEFLECTOR AND CUT OFF EXCESS.
- 3- POSITION THE DEFLECTOR ON HOOD. BE SURE THAT THE BOTTOM EDGE OF THE DEFLECTOR IS ALINE WITH THE EDGE OF THE GRILL.
- 4- MARK BRACKET HOLES ON HOOD.


**ATTENTION**  
**DO NOT MARK SIDE HOLES, IT WILL BE DONE IN A FURTHER STEP.**

**CAUTION**  
**REMOVE THE HOOD DEFLECTOR TO PREVENT DAMAGE**

- 5- DRILL HOLES AS MARKED AT 9/32" (.28125") DIA.
- 6- TEMPORARILY INSTALL THE DEFLECTOR AS ILLUSTRATED.
- 7- PRESS SIDE OF THE DEFLECTOR ONTO THE HOOD AND MARK HOLES.

**CAUTION**  
**REMOVE THE HOOD DEFLECTOR TO PREVENT DAMAGE**

- 8- DRILL SIDE HOLES AT 25/64" (.390625") DIA.
- 9- INSTALL THE METAL INSERT
- 10- INSTALL THE DEFLECTOR WITH HARDWARE AS ILLUSTRATED.
- 11- TIGHTEN ALL SCREWS AND BOLTS.

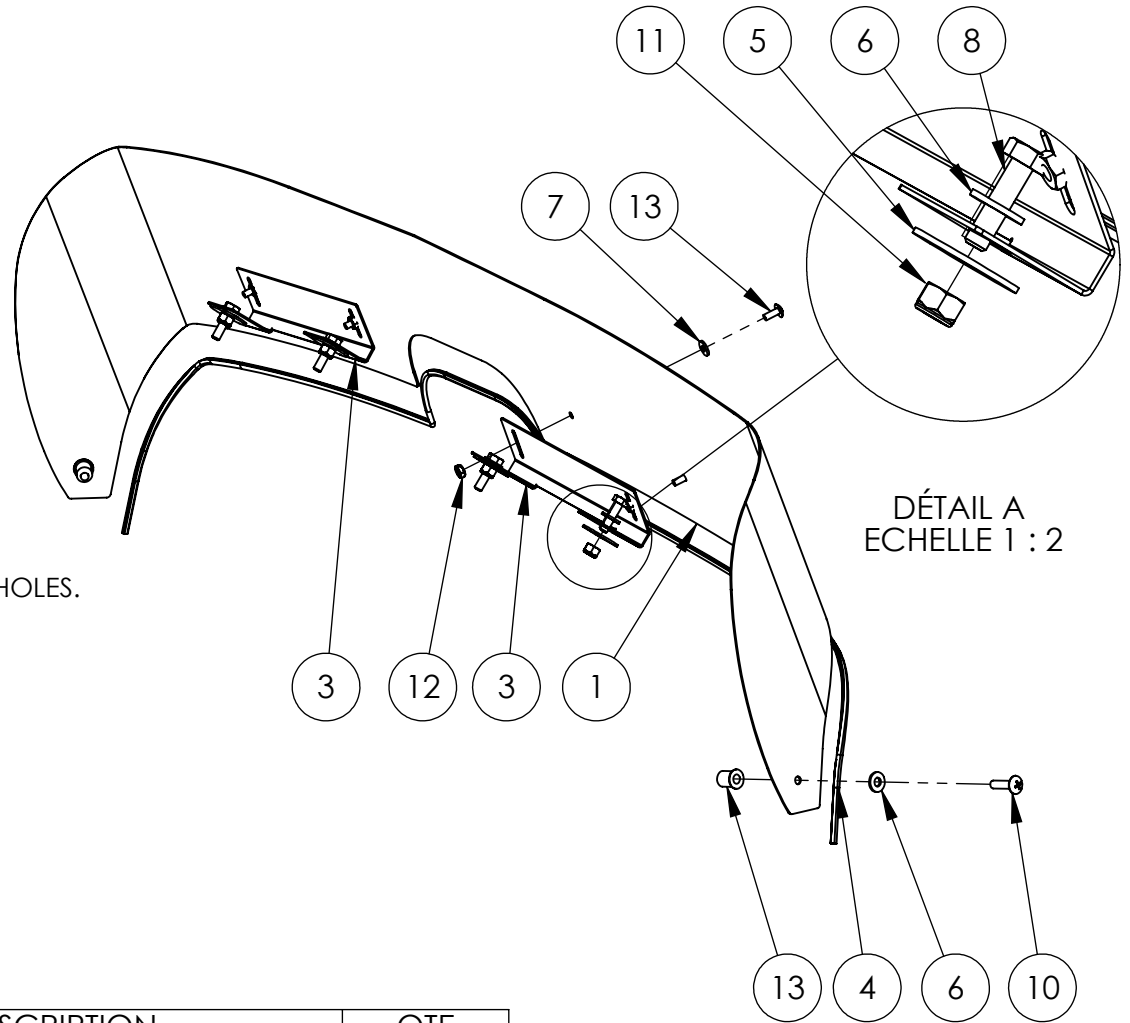

No. ARTICLE	NUMERO DE PIECE	DESCRIPTION	QTE
1	M7121012SC	HOOD DEFLECTOR	1
2	K7121012BH	HARDWARE KIT INCLUDES:	-
3	-	PR54DEG	2
4	-	ES28-215-P80	1
5	-	FENDER WASHER 1/4"OD1 1/4"SS	4
6	-	FLAT WASHER 1/4" SS	6
7	-	FLAT WASHER ID#10 X OD 1/2" SS	4
8	-	HEX. BOLT 1/4NC X 1	4
13	-	TRUSS PHILLIPS #10-32NF X 1/2"SS	4
10	-	TRUSS PHILIPS 1/4-20NCX1"SS	2
11	-	NYLON LOCK NUT, 1/4-20 UNC	4
12	-	NYLON LOCK NUT #10-32NF SS	4
13	-	LF,INSERT STL 1/4"-20NC X.160	2

**METCHRO PRODUCTS**

TITLE:  
**HOOD DEFLECTOR**  
**PETERBILT 579 13&UP**

SIZE | DWG. NO.  
**A 7121012**

NAME	DATE	REV	DATE
DRAWN BY P.W.	16-07-2013	PH1	-

SCALE: 1:16      WEIGHT: LBS      SHEET: 1 OF 1