


Pete -1024


Step 1

Assemble visor together with the brackets then mark the holes for the brackets on cab. Drill out the holes with a 1/2 inch drill bit. Then disassemble the brackets from the visor.

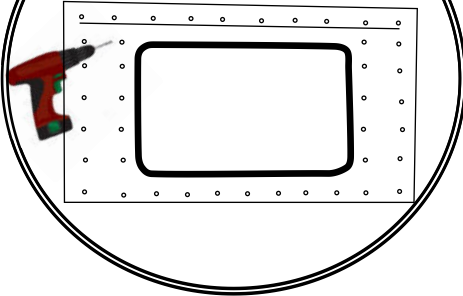




Step 2

Mount the brackets on to the cab & tighten them to the truck. Mount the visor over the brackets & tighten the visor to the brackets.

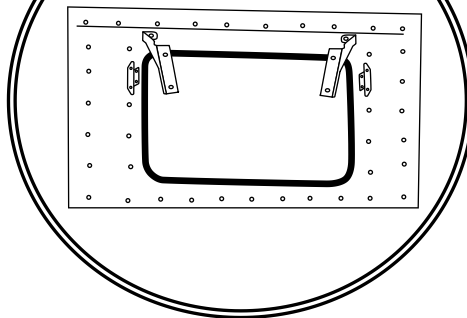

Step 3

You are finished! Remove plastic & wipe with windex.

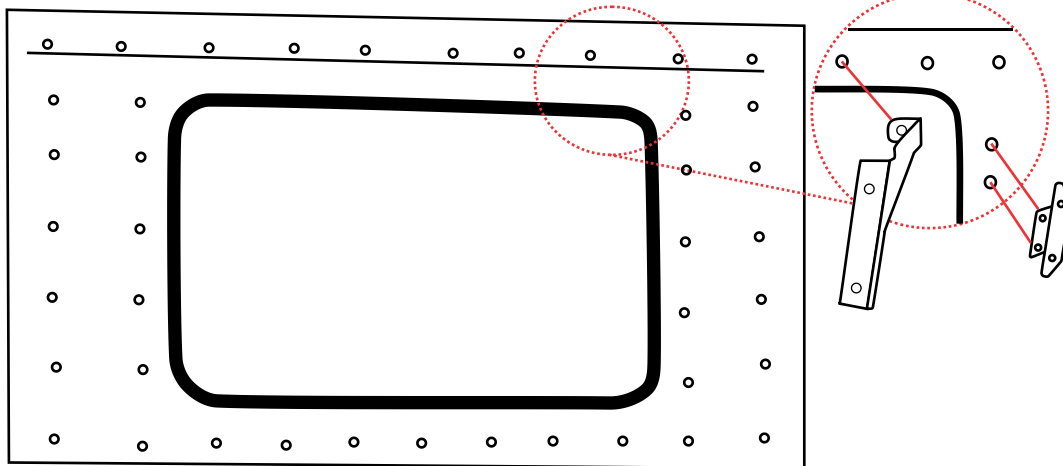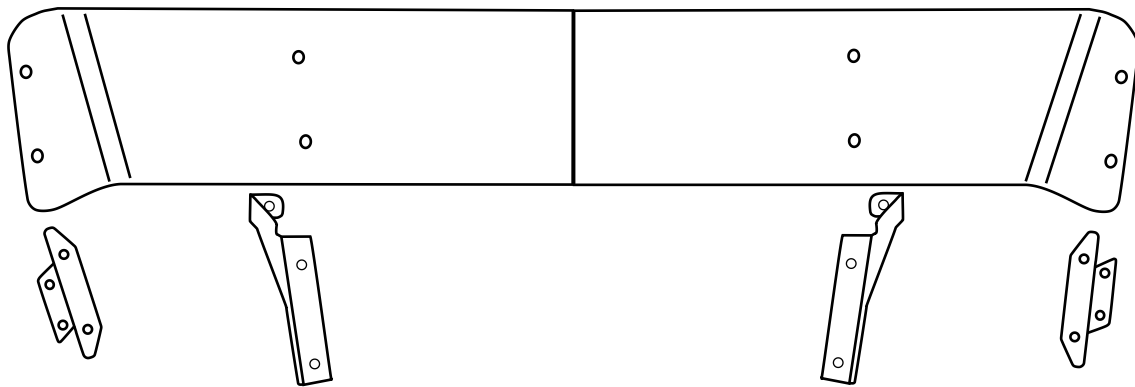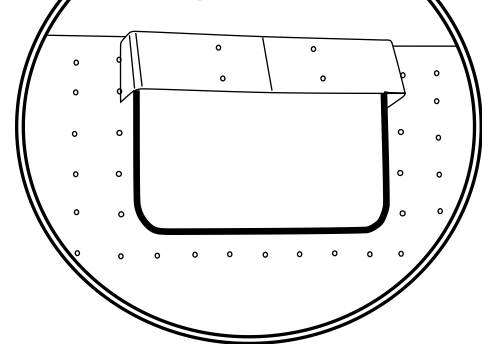

Notes

- Use silicone or something similar to patch any exposed holes once installation is completed.
- Drill cautiously to avoid puncturing the cabs interior.
- Insert screws "loosely" starting from outer edge to center. Then start "tightening" from center to outer edge.

Bolt Kit

	QTY: 8	<u>Pan Phillips</u>	1/4 - 20 x 3/4
	QTY: 26	<u>Flat Washer</u>	1/4 x 5/8
	QTY: 6	<u>Weld Nut</u>	1/4 - 20 x 1"
	QTY: 6	<u>Hex Head</u>	1/4 - 20 x 1 1/4
	QTY: 10	<u>Nylon Hex Nuts</u>	1/4 x 20
	QTY: 2	<u>Hex Head</u>	1/4 - 20 x 3/4