

ITEM NO.	PART NO.	PART NO.	PART NO.	PART NO.	DESCRIPTION	QTY
1	M7331020SD	M7331027SD	M7331031SD	M7331040SD	SUN VISOR PANEL	1
2	M7331020SG	M7331027SG	M7331031SG	M7331040SG	SUN VISOR PANEL	1
3	K7331027BH	-	-	-	HARDWARE KIT INCLUDES:	-
4	-	-	-	-	PR9331027-D01	1
5	-	-	-	-	PR9331027-G01	1
6	-	-	-	-	PR9331027-D02	1
7	-	-	-	-	PR9331027-G02	1
8	-	-	-	-	PR9331027-U01	4
9	-	-	-	-	TRUSS PHILIPS 1/4"-20NCX3/4"SS	20
10	-	-	-	-	LOCK WASHER 1/4" SS	28
11	-	-	-	-	FLAT WASHER 1/4" SS	28
12	-	-	-	-	HEX. BOLT 1/4"NC X 3/4"	8
13	-	-	-	-	HEX NUT 1/4-20NC	4

**TRUX ACCESSORIES**

TITLE:  
**SUN VISOR FREIGHTLINER FIBER ROOF**  
 GANGS. SERIE CLASSIC, CLASSIC XL, FLD112 & 120

SIZE DWG. NO.  
**A TSUN-F3 TSUN-F4**

NAME	DATE	REV	DATE
DRAWN BY P.W.	02-10-2008	PH1	-

SCALE: 1:10      WEIGHT: LBS      SHEET: 1 OF 1

## BEFORE BEGINNING INSTALLATION, READ ALL INSTRUCTIONS

### INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR, BUT REMAIN THE EXISTING BOLTED BRACKETS ONTO THE CAB.
- 2- IF THE MIRROR IS FIXED ON THE CAB, REMOVE THE MIRROR.
- 3- INSTALL THE SUPPLIED BRACKETS ONTO THE EXISTING BRACKETS ON THE CAB.
- 4- TEMPORARILY INSTALL THE SUN VISOR ONTO THE CAB.
- 5- USING THE SUN VISOR, MARK HOLES ON BOTH ENDS OF SUN VISOR (IF FACTORY SUN VISOR PREVIOUSLY INSTALL) SKIP TO STEP #7.

#### ATTENTION


#### REMOVE SUN VISOR TO PREVENT DAMAGE

- 6- DRILL THE PREVIOUSLY MARKED HOLES AT ½ IN. DIA.
- 7- INSERT THE WELLNUTS.
- 8- IF WITHOUT LIGHTS; SKIP TO STEP #12.
- 9- INSTALL THE LIGHTS ON SUN VISOR, CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 10- INSTALL THE SUN VISOR ON THE CAB, AS ILLUSTRATED.

#### CAUTION

**IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.**

- 11- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 12- REINSTALL THE SUN VISOR ON THE CAB, AS ILLUSTRATED.
- 13- REINSTALL THE MIRROR IF PREVIOUSLY REMOVED AT STEP #2.
- 14- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

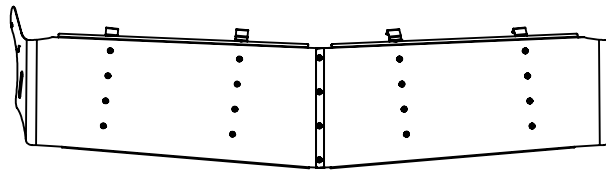

## TRUX ACCESSORIES

TITLE:

SUN VISOR FREIGHTLINER FIBER ROOF  
GANGS. SERIE CLASSIC, CLASSIC XL, FLD112 & 120

SIZE DWG. NO.

**A TSUN-F3 TSUN-F4**

NAME	DATE	REV	DATE
DRAWN BY P.W.	02-10-2008	PH1	-
SCALE: 1:24	WEIGHT: LBS	SHEET: 1 OF 1	