

LOW ROOF/HIGH RISE
& DAY CAB

11" DROP FLAT GLASS

TRUX ACCESSORIES

TITLE:
SUN VISOR
INTERNATIONAL 9000 SERIES UP TO 1998

SIZE DWG. NO.
A TSUN-I2, TSUN-ING, TSUN-IN10B

NAME	DATE	REV	DATE
P.W.	.8-09-2007	PH1	-

SCALE: 1:10

WEIGHT: LBS

SHEET: 1 OF 1

ITEM NO.	PART NO.	PART NO.	PART NO.	QTY 001-028- 029	PART NO.	PART NO.	QTY 004, 005	DESCRIPTION
1	M7431001SD	M7431028SD	M7431029SD	1	M7431004SD	M7431005SD	1	SUN VISOR PANEL
2	M7431001SG	M7431028SG	M7431029SG	1	M7431004SG	M7431005SG	1	SUN VISOR PANEL
3	K7431001BH	-	-	-	K7431004BH	-	-	HARDWARE KIT INCLUDES:
4	-	-	-	1	-	-	1	PR9431001-G01
5	-	-	-	1	-	-	1	PR9431001-D01
6	-	-	-	1	-	-	1	PR9431001-D02
7	-	-	-	1	-	-	1	PR9431001-G02
8	-	-	-	-	-	-	1	PR9431004-C01
9	-	-	-	-	-	-	2	PR9431004-U01
10	-	-	-	-	-	-	2	PR9431004-U02
11	-	-	-	-	-	-	1	GROMMET 5/16" DI X 21/32" DE
12	-	-	-	-	-	-	4	GROMMET 5/8" DI X 1 1/8" DE
13	-	-	-	13	-	-	16	TRUSS PHILIPS 1/4"- 20NCX3/4"SS
14	-	-	-	4	-	-	4	WELL NUT 1/4"-20NC
15	-	-	-	13	-	-	16	HEX NUT 1/4"-20NC
16	-	-	-	21	-	-	24	LOCK WASHER 1/4" SS
17	-	-	-	4	-	-	4	TRUSS PHILIPS 1/4"-20NCX1"SS
18	-	-	-	8	-	-	8	HEX. BOLT 1/4NC X 1
19	-	-	-	25	-	-	28	FLAT WASHER 1/4" SS

ITEM #8, 9, 10, 11 & 12 ARE USED ONLY WITH
7431004 & 7431005

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR AND KEEP THE FASTENING HARDWARE.
- 2- INSTALL THE BRACKETS ONTO THE EXISTING HOLES OF THE TRUCK,
AS ILLUSTRATED.
- 3- TEMPORARILY INSTALL THE SUN VISOR ON THE BRACKETS, AS ILLUSTRATED.
- 4- USING THE SUN VISOR, TO MARK BOTH END HOLES ON THE CAB.

CAUTION

REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 5- DRILL THE PREVIOUSLY MARKED HOLES AT ½ IN. DIA.
- 6- INSERT THE WELL NUTS IN THE HOLES. IF NO LIGHTS GO TO STEP # 12.

CAUTION


MODIFICATION ON TRUCK HARNESS, MAY BE REQUIRED TO CONNECT SUN VISOR HARNESS.

- 7- INSTALL THE LIGHTS ON LEFT AND RIGHT-HAND SIDE.
- 8- MAKE THE LIGHTS CONNECTION AND DIRECT WIRE TOWARDS THE CENTER.
- 9- INSTALL AND CONNECT THE CENTRAL LIGHT TO THE OTHER LIGHTS.
- 10- CUT THE 4 LARGER GROMMETS, AND INSTALL IT ON THE BRACKETS AS ILLUSTRATED.
- 11- INSTALL THE WIRE COVERS FROM OUTSIDE TO CENTER, FINISHING WITH THE CENTRAL
WIRE COVER AS ILLUSTRATED.
- 12- TEMPORARILY INSTALL THE SUN VISOR USING THE FASTENING HARDWARE, BUT
DON'T COMPLETELY TIGHTEN FOR EASIER ADJUSTMENT. IF NO LIGHTS, GO TO STEP # 14.

CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 13- PASS THE CONNECTOR THROUGH THE GROMMET OF THE CENTRAL WIRE COVER AND
CONNECT IT TO THE HARNESS ON THE TRUCK.
- 14- FINALLY TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

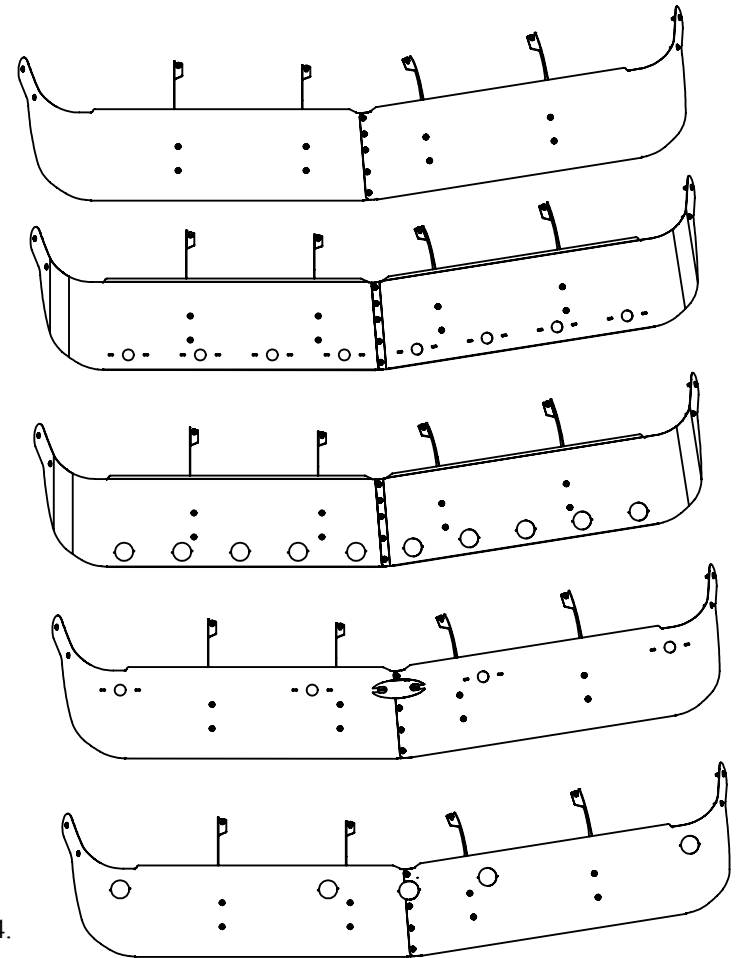

TRUX ACCESSORIES

TITLE:

SUN VISOR

INTERNATIONAL 9000 SERIES UP TO 1998

SIZE

DWG. NO.

A

TSUN-IN, TSUN-ING, TSUN-IN10B

NAME	DATE	REV	DATE
DRAWN BY P.W.	.8-09-2007	PH1	-
SCALE: 1:24	WEIGHT: LBS	SHEET: 1 OF 1	