

No. ARTICLE	NUMERO DE PIÈCE	DESCRIPTION	QTÉ
1	M7431030SD	SUN VISOR PANEL	1
2	M7431030SG	SUN VISOR PANEL	1
3	K7431030BH	HARDWARE KIT INCLUDES:	1
4	-	PR9431030-C01	1
5	-	PR9431030-C02	1
6	-	PR9431020-G03	1
7	-	PR9431030-G02	1
8	-	PR9431020-D03	1
9	-	PR9431030-D02	1
10	-	PR9431030-D03	1
11	-	PR9431030-G03	1
12	-	FLAT WASHER 1/4" SS	26
13	-	LOCK WASHER 1/4" SS	30
14	-	TRUSS PHILIPS 1/4"-20NCX3/4"SS	26
15	-	HEX NUT 1/4-20NC	22
16	-	HEX. BOLT 1/4NC X 1	4
17	-	LF,INSERT STL 1/4"-20NC X.160	8

TRUX ACCESSORIES

TITLE:
SUN VISOR INTERNATIONAL
9000 SÉRIES DAY CAB FLAT TOP 99&UP

SIZE DWG. NO.
ATSUN-15

NAME	DATE	REV	DATE
DRAWN BY C. R.	16-08-2007	PH1	-

SCALE: 1:9 WEIGHT: LBS SHEET: 1 OF 1

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR AND KEEP THE FASTENING HARDWARE.
- 2- INSTALL THE BRACKETS ONTO THE EXISTING HOLES OF THE TRUCK. (THE CENTRAL AND BOTH ENDS WITH RETAINED HARDWARE.
- 4- FASTEN THE SUN VISOR AND THE REMAINING BRACKETS AS ILLUSTRATED.
- 5- TEMPORARILY INSTALL THE SUN VISOR.
- 6- MARK BRACKETS MISSING HOLES AND BOTH ENDS HOLES.

CAUTION


REMOVE SUN VISOR TO PREVENT DAMAGE.

- 8- DRILL MARKED OUT HOLES AT $\phi \frac{1}{2}$ " ($\phi .5$) AND INSERT WELLNUTS.
- 10- INSTALL THE LIGHTS OF LEFT AND RIGHT-HAND SIDE.
- 11- MAKE THE CONNECTION OF THE LIGHTS AND DIRECT WIRE TOWARDS THE CENTER.
- 13- FASTEN THE SUN VISOR AS ILLUSTRATED.

CAUTION

IT IS THE RESPONSABILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 14- REINSTALL THE SUN VISOR ON THE CAB.
- 15- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 16- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

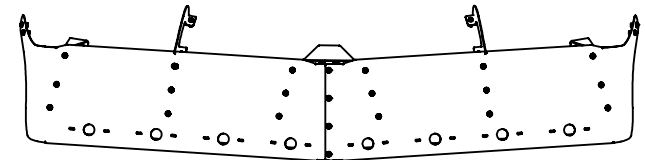

TRUX ACCESSORIES			
TITLE: SUN VISOR INTERNATIONAL 9000 SÉRIES DAY CAB FLAT TOP 99&UP			
SIZE	DWG. NO.		
A	TSUN-15		
NAME	DATE	REV	DATE
DRAWN BY C. R.	16-08-2007	PH1	-
SCALE: 1:24		WEIGHT: LBS	SHEET: 1 OF 1