


ITEM NO.	PART NO.	DESCRIPTION	QTY
1	M7231019SG	PARE-SOLEIL	1
2	M7231019SD	PARE-SOLEIL	1
3	K7231019BH	HARDWARE KIT INCLUDES:	-
4	-	PR9231019-C00	1
5	-	PR9231019-D00	1
6	-	PR9231019-G00	1
7	-	FLAT WASHER ID#10 X OD 1/2" SS	9
8	-	FLAT WASHER 1/4" SS	10
9	-	TRUSS PHILLIPS #10-32NF X 1/2"SS	9
10	-	TRUSS PHILLIPS 1/4-20NCX1"SS	4
11	-	LF,INSERT STL 1/4"-20NC X.160	4
12	-	LOCK WASHER 1/4" SS	6
13	-	HEX NUT 1/4-20NC	6
14	-	HEX. BOLT 1/4NC X 1	6
15	-	NYLON LOCK NUT #10-32NF SS	9

TITLE: SUN-VISOR			
KENWORTH T680-T880 DAY CAB WITH OEM METAL SUN VISOR 12&UP			
SIZE	DWG. NO.		
A	TSUN-K21		
NAME	DATE	REV	DATE
DRAWN BY P.W.	30-03-2014	PH1	-
SCALE: 1:8		WEIGHT: LBS	SHEET: 1 OF 1

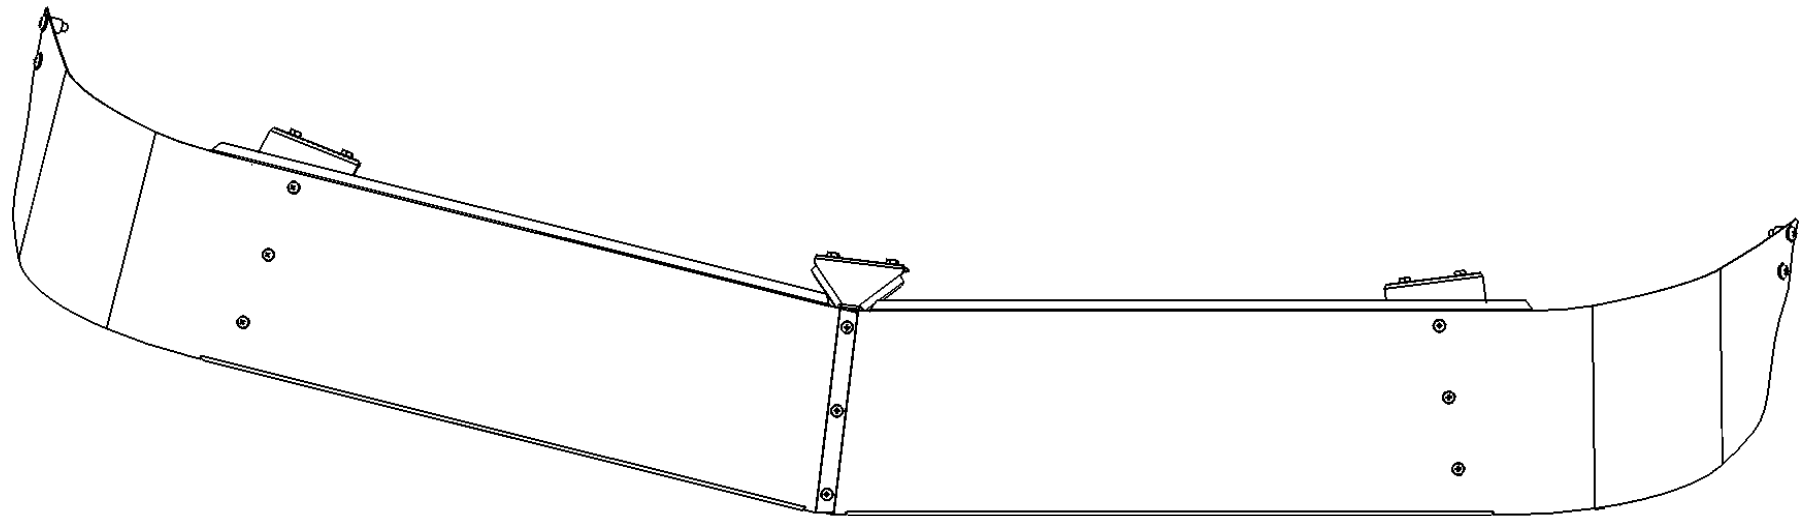

DO NOT REMOVE THE SPV PROTECTION
UNTILL THE INSTALLATION IS FINISHED

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE EXISTING SUN VISOR.
- 2- ON A TABLE PREASSEMBLE THE SUN VISOR PANEL & THE BRACKETS
- 3- TEMPORARILY INSTALL THE SUN VISOR ON THE EXISTING BRACKETS USING HARDWARE AS ILLUSTRATED.
- 4- MARK BOTH ENDS HOLES OF SUN VISOR ON CAB.

ATTENTION

REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 5- DRILL MARKED HOLES AT 25/64" (.390625") DIA.
- 6- INSTALL METAL INSERT.
- 7- REINSTALL THE SUN VISOR ON THE CAB.
- 8- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

TITLE: SUN-VISOR			
KENWORTH T680-T880 DAY CAB WITH OEM METAL SUN VISOR 12&UP			
SIZE	DWG. NO.		
A	TSUN-K21		
NAME	DATE	REV	DATE
DRAWN BY P.W.	30-03-2014	PH1	-
SCALE: 1:8		WEIGHT: LBS	SHEET: 1 OF 1