

ITEM NO.	PART NO.	PART NO.	PART NO.	DESCRIPTION	QTY
1	M7231001SG	M7231007SG	M7231015SG	SUN VISOR PANEL	1
2	M7231001SD	M7231007SD	M7231015SD	SUN VISOR PANEL	1
3	K7231001BH	-	-	HARDWARE KIT INCLUDES:	-
4	-	-	-	PR9231001-C01	1
5	-	-	-	PR9231001-C02	1
6	-	-	-	RECOVERED ON THE TRUCK	1
7	-	-	-	PR9231001-U00	2
8	-	-	-	RECOVERED ON THE TRUCK	1
9	-	-	-	TRUSS PHILIPS 1/4"-20NCX3/4"SS	12
10	-	-	-	LOCK WASHER 1/4" SS	4
11	-	-	-	FLAT WASHER ID#10 X OD 1/2" SS	4
12	-	-	-	NYLON LOCK NUT #10-32NF SS	4
13	-	-	-	TRUSS PHILIPS #10-32NFX3/4"SS	4
14	-	-	-	HARDWARE KIT INCLUDES:	1
15	-	-	-	HEX NUT 1/4-20NC	4

TRUX ACCESSORIES

TITLE:
SUN VISOR KENWORTH
CURVED GLASS W900 T800 1998 & UP

SIZE DWG. NO. **TSUN-W900CL,
TSUN-W900CG, TSUN-K4**

NAME	DATE	REV	DATE
DRAWN BY P.W.	15-04-2008	PH1	-

SCALE: 1:8 WEIGHT: LBS SHEET: 1 OF 1

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR(But keep #6 & 8 Recover brackets from OEM visor)
- 2- INSTALL THE BRACKETS ON THE PANELS AS ILLUSTRATED.
- 3- TEMPORARILY INSTALL THE SUN VISOR ONTO THE CAB AS ILLUSTRATED.
- 4- USE RECOVERED HARDWARE FOR HOLES ON BOTH ENDS OF SUN VISOR.
- 5- MARK BRACKET MISSING HOLES ON CAB.

ATTENTION


REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 6- DRILL MARKED HOLES AT 7/32" (.21875) DIA.
- 7- IF WITHOUT LIGHTS; SKIP TO STEP#11.
- 8- INSTALL THE LIGHTS ON SUN VISOR
- 9- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 10- FASTEN THE SUN VISOR AS ILLUSTRATED.
- 11- REINSTALL THE SUN VISOR ON THE CAB.

CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 12- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 13- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

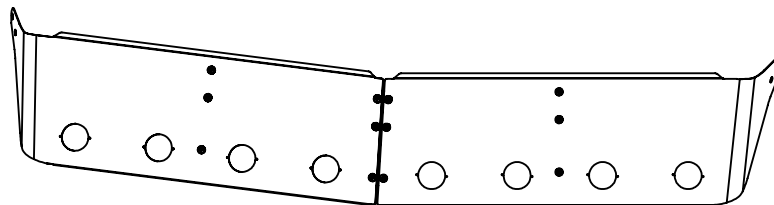

TRUX ACCESSORIES

TITLE:
SUN VISOR KENWORTH
CURVED GLASS W900 T800 1998 & UP

SIZE DWG. NO. **TSUN-W900CL,**
TSUN-W900CG, TSUN-K4

NAME	DATE	REV	DATE
DRAWN BY P.W.	15-04-2008	PH1	-
SCALE: 1:16	WEIGHT: LBS	SHEET: 1 OF 1	