


ITEM NO.	PART NO.	PART NO.	PART NO.	DESCRIPTION	QTY
1	M7131007SG	M7131009SG	M7131023SG	SUN VISOR PANEL	1
2	M7131007SD	M7131009SD	M7131023SD	SUN VISOR PANEL	1
3	K7131007BH	-	-	HARDWARE KIT INCLUDES	1
4	-	-	-	PR9131007-U00	6
5	-	-	-	FLAT WASHER 1/4" SS	39
6	-	-	-	TRUSS PHILIPS 1/4"-20NCX3/4"SS	27
7	-	-	-	LOCK WASHER 1/4" SS	39
8	-	-	-	HEX. BOLT 1/4NC X 1	12
9	-	-	-	WELL NUT 1/4NC	16
10	-	-	-	HEX NUT 1/4-20NC	23

TRUX ACCESSORIES			
TITLE: SUN VISOR			
PETERBILT 379 ULTRA CAB 2005 & UP			
SIZE	DWG. NO.		
A	TSUN-P11, TSUN-P12, TSUN-P13		
NAME	DATE	REV	DATE
DRAWN BY P.W.	07-12-2007	PH1	-
SCALE: 1:8		WEIGHT: LBS	SHEET: 1 OF 1

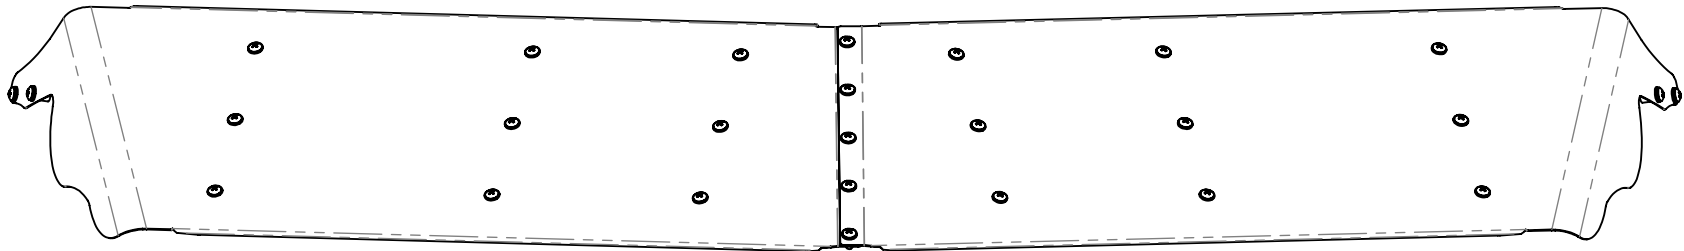


FRONT VIEW

PLEASE READ THE INSTRUCTIONS COMPLETELY BEFORE BEGINNING

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR.
- 2- REDRILL EXISTING HOLES TO 1/2 in. AND INSERT WELLNUTS.
- 3- INSTALL THE BRACKETS ONTO THE CAB.
- 4- TEMPORARILY INSTALL THE SUN VISOR AS ILLUSTRATED
- 5- USING THE SUN VISOR, MARK OUT HOLES ON BOTH ENDS OF SUN VISOR.
- 6- DRILL THE PREVIOUSLY MARKED OUT HOLES AT 1/2 IN. DIA.

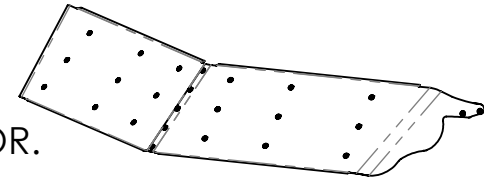

ATTENTION

REMOVE SUN VISOR TO PREVENT DAMAGE

- 7- INSERT THE WELLNUTS.
- 8- IF WITHOUT LIGHTS; SKIP TO STEP 11.
- 9- INSTALL THE LIGHTS ON SUN VISOR.
- 10- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 11- FASTEN THE SUN VISOR USING THE FASTENING HARDWARE.

CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 12- REINSTALL THE SUN VISOR ON THE CAB.
- 13- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 14- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

TRUX ACCESSORIES			
TITLE: SUN VISOR PETERBILT 379 ULTRA CAB 2005 & UP			
SIZE A	DWG. NO. TSUN-P11, TSUN-P12, TSUN-P13		
NAME	DATE	REV	DATE
DRAWN BY P.W.	07-12-2007	PH1	-
SCALE: 1:24	WEIGHT: LBS	SHEET: 1 OF 1	