

ITEM NO.	PART NO.	PART NO.	PART NO.	DESCRIPTION	QTY
1	M7131008SD	M7131011SD	M7131012SD	SUN VISOR PANEL	1
2	M7131008SG	M7131011SG	M7131012SG	SUN VISOR PANEL	1
3	K7131002BH	-	-	HARDWARE KIT INCLUDES	1
4	-	-	-	PR9131002-C00	1
5	-	-	-	PR9131002-D00	1
6	-	-	-	PR9131002-G00	1
7	-	-	-	WELL NUT 1/4NC	12
8	-	-	-	LOCK WASHER 1/4" SS	11
9	-	-	-	FLAT WASHER 1/4"	23
10	-	-	-	TRUSS PHILIPS 1/4"X 3/4"SS	15
11	-	-	-	HEX. BOLT 1/4NC X 3/4"	8
12	-	-	-	HEX NUT 1/4-20NC	11

TRUX ACCESSORIES

TITLE:
SUN VISOR LOW ROOF
PETERBILT 379 - 2005 & UP


SIZE DWG. NO.
A TSUN-PET379L4 TSUN-PET379L4L TSUN-PET379L4G

NAME	DATE	REV	DATE
DRAWN BY P.W.	24-09-2008	PH1	-

SCALE: 1:16

WEIGHT: LBS

SHEET: 1 OF 1

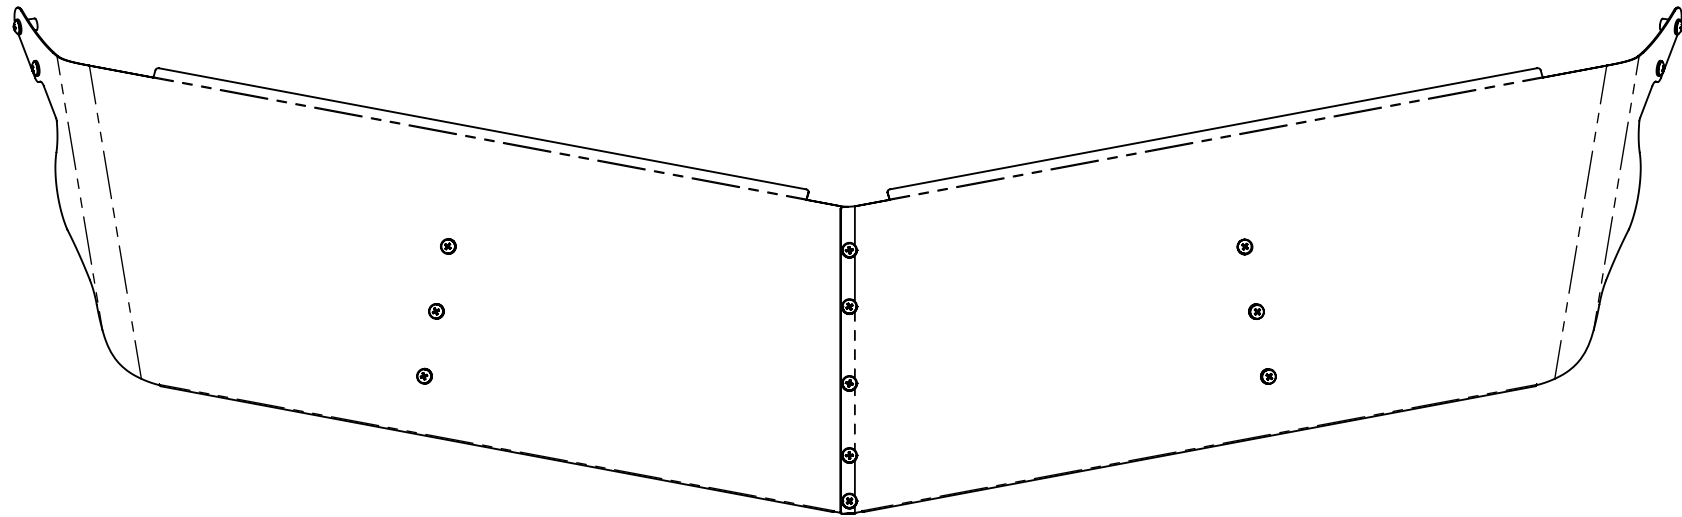

FRONT VIEW

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR.
- 2- REDRILL EXISTING HOLES TO 1/2 in. AND INSERT WELLNUTS.
- 3- INSTALL THE BRACKETS ONTO THE CAB.
- 4- TEMPORARILY INSTALL THE SUN VISOR AS ILLUSTRATED
- 5- USING THE SUN VISOR, MARK OUT HOLES ON BOTH ENDS OF SUN VISOR.

CAUTION


REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 6- DRILL MARKED HOLES AT 1/2 IN. DIA.
- 7- INSERT THE WELLNUTS.
- 8- IF WITHOUT LIGHTS; SKIP TO STEP #11.
- 9- INSTALL THE LIGHTS ON SUN VISOR
- 10- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 11- REINSTALL THE SUN VISOR ON THE CAB.

CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 12- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 13- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

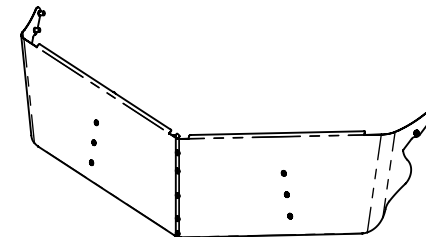

TRUX ACCESSORIES

TITLE:
SUN VISOR LOW ROOF
PETERBILT 379 - 2005 & UP

SIZE	DWG. NO.		
A	TSUN-PET379L4 TSUN-PET379L4L TSUN-PET379L4G		

NAME	DATE	REV	DATE
DRAWN BY P.W.	24-09-2008	PH1	-
SCALE: 1:24		WEIGHT: LBS	SHEET: 1 OF 1