

ITEM NO.	PART NO.	PART NO.	PART NO	DESCRIPTION	QTY
1	M7731002SD	M7731004SD	M7731007SD	SUN VISOR PANEL	1
2	M7731002SG	M7731004SG	M7731007SG	SUN VISOR PANEL	1
3	K7731002BH	-	-	HARDWARE KIT INCLUDES:	1
4	-	-	-	PR9731002-D00	1
5	-	-	-	PR9731002-G00	1
6	-	-	-	TRUSS PHILIPS 1/4"-20NCX3/4"SS	4
7	-	-	-	TRUSS PHILIPS 1/4"-20NCX1/2" S	4
8	-	-	-	TRUSS PHILIPS 1/4"-20NCX1"SS	10
9	-	-	-	HEX NUT 1/4"-20NC	8
10	-	-	-	FLAT WASHER 1/4" SS	10
11	-	-	-	LOCK WASHER 1/4" SS	18
12	-	-	-	HEX. WASHER BOLT #10 X 3/4	4
13	-	-	-	WELL NUT 1/4"-20NC	10

TRUX ACCESSORIES

TITLE:
SUN VISOR VOLVO HIGH ROOF
VN670, VN780, VT880 2003 & UP

SIZE: DWG. NO.
A TSUN-V1, TSUN-V6

NAME	DATE	REV	DATE
DRAWN BY P.W.	18-10-2006	PH2	-

SCALE: 1:16 WEIGHT: LBS SHEET: 1 OF 1

BEFORE BEGINNING INSTALLATION, READ ALL INSTRUCTIONS


INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR.
- 2- INSTALL THE BRACKETS ONTO THE CAB AT THE SAME PLACE OF THE OEM SUN VISOR.
- 3- TEMPORARILY INSTALL THE SUN VISOR ONTO CAB.
- 4- USING THE SUN VISOR, MARK HOLES ON BOTH ENDS OF SUN VISOR.

ATTENTION

REMOVE SUN VISOR TO PREVENT DAMAGE

- 5- DRILL THE PREVIOUSLY MARKED OUT HOLES AT ½ IN. DIA.
- 6- INSERT THE WELLNUTS.
- 7- INSTALL THE LIGHTS ON SUN VISOR
- 8- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 9- FASTEN THE SUN VISOR USING THE FASTENING HARDWARE.
- 10- INSTALL AND CONNECT THE CENTRAL LIGHT TO THE OTHERS.
- 11- REINSTALL THE SUN VISOR ON THE CAB.

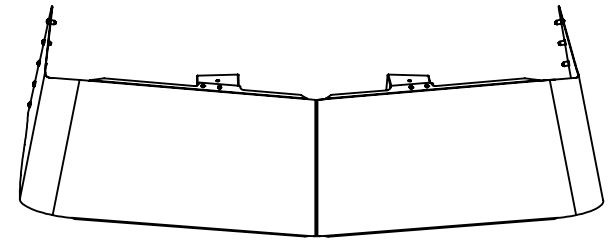

3M TAPE

SURFACE PREPARATION PROCEDURE FOR STICKING 3M ADHESIVE TAPE

Note: Do not use BRAKE CLEANER to clean surface.

The truck should be in an environment having an ambient temperature of 15 to 30 degrees C. Clean well the surface with soapy water. Completely dry the surface.

Take a clean piece of cloth (no tissue papers), generously dip in isopropyl alcohol and clean the surface till there is no dirt on the cloth. Let the surface dry out (maximum 5 minutes).



Stick the accessory on to the cleaned surface very carefully and press the accessory on the surface with hands, (The accessory will stick instantly).

Let the accessory dry for 24 hours for maximum adhesion, before putting the truck in service.

CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 12- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 13- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

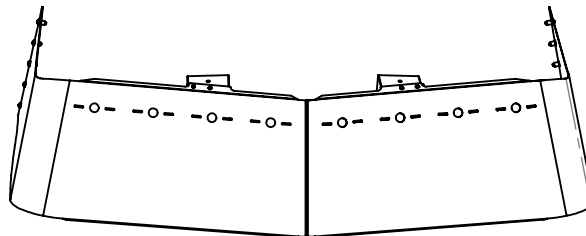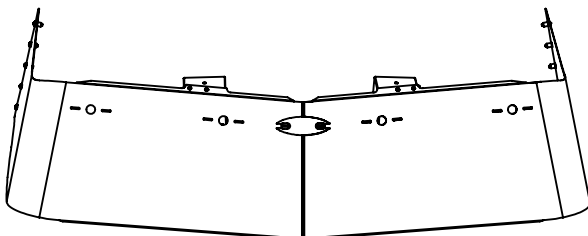

TRUX ACCESSORIES

TITLE:

SUN VISOR VOLVO HIGH ROOF
VN670, VN780, VT880 2003 & UP

SIZE DWG. NO.

A TSUN-V1, TSUN V6

NAME	DATE	REV	DATE
DRAWN BY P.W.	18-10-2006	PH2	-
SCALE: 1:24	WEIGHT: LBS	SHEET: 1 OF 1	