

V-8000


Step 1
Remove visor & brackets from truck.

Step 2
Assemble the visor & brackets together. Mark the holes on the cab for the brackets. After they have been marked drill out with 1/2 drill bit.

Step 3
Insert weld nuts & tighten the outer brackets on to the cab



Step 4
Mount the visor over brackets & tighten all the screws. Remember to use original screws for the sides.

Step 5
You are finished! Remove plastic from visor & clean with windex.

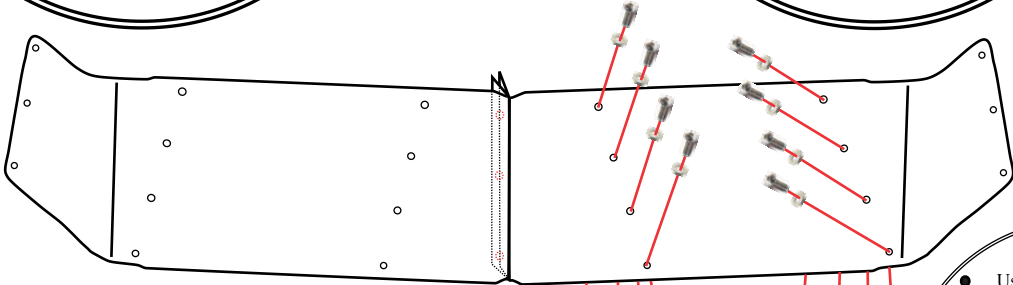

- Notes**
- Use silicone or something similar to patch any exposed holes once installation is completed.
 - Drill cautiously to avoid puncturing the cabs interior.
 - Insert screws "loosely" starting from outer edge to center. Then start "tightening" from center to outer edge.

Example

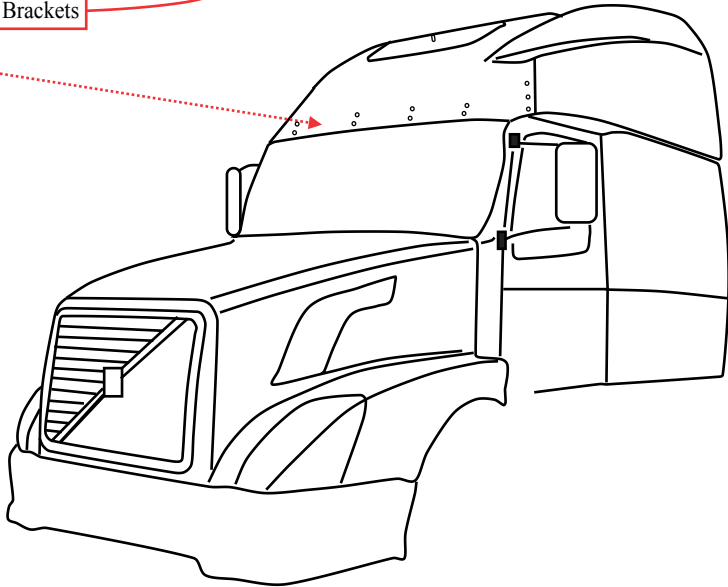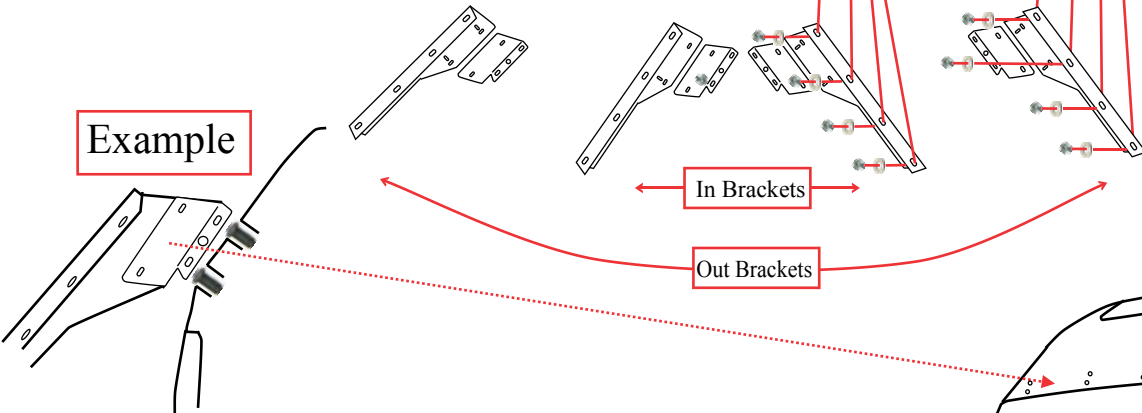

Bolt Kit			
	QTY: 16	Pan Phillips	1/4 - 20 x 3/4
	QTY: 56	Flat Washer	1/4 x 5/8
	QTY: 8	Weld Nut	1/4 - 20 x 1"
	QTY: 8	Hex Head	1/4 - 20 x 1 1/4
	QTY: 24	Nylon Hex Nuts	1/4 x 20
	QTY: 4	Pan Phillips	10 - 32 x 1/2
	QTY: 8	Flat Washer	# 10
	QTY: 4	Nylon Hex Nuts	10 - 32