


VI 135003 Wicked Visor International Lonestar (2010-14)/Prostar (2008-14)



INSTALLATION INSTRUCTIONS

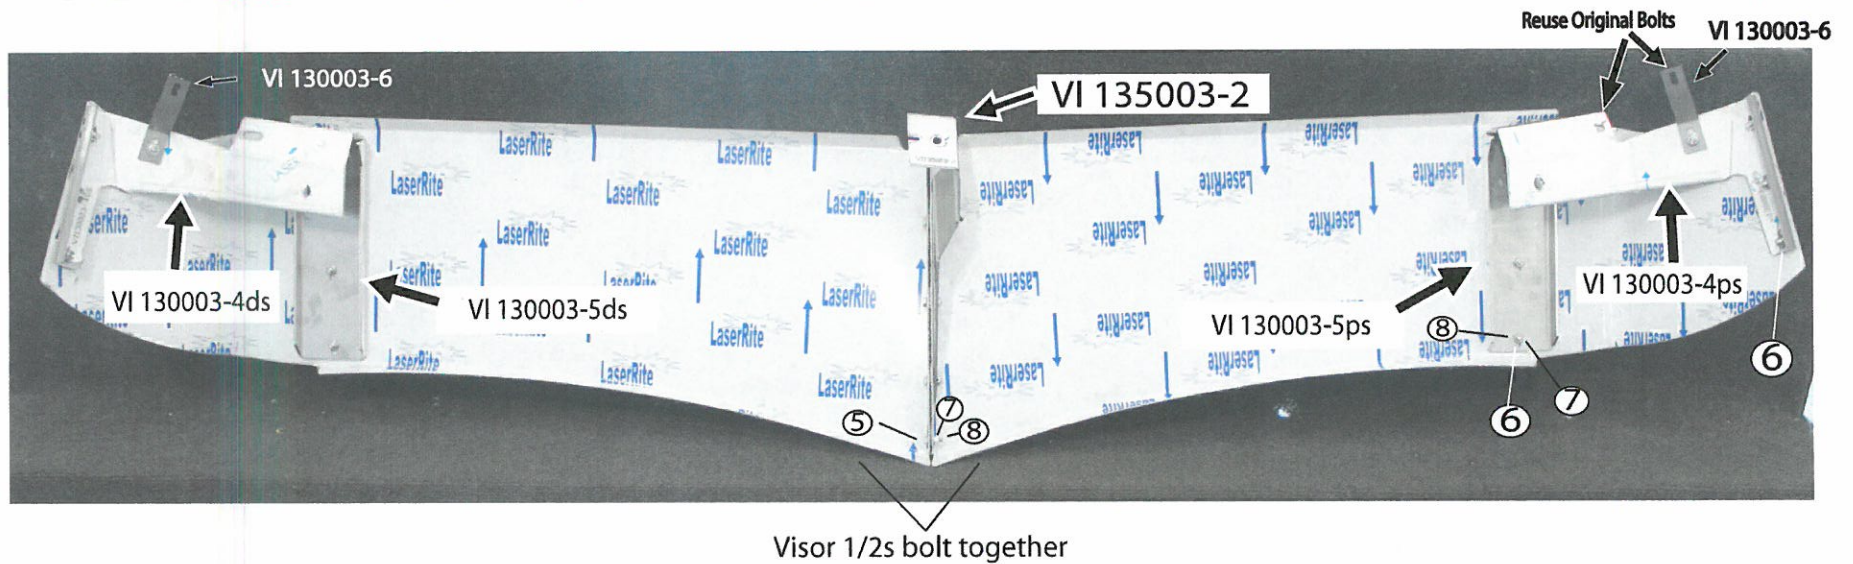

Mount using factory holes & bolts



Mount using factory holes & bolts

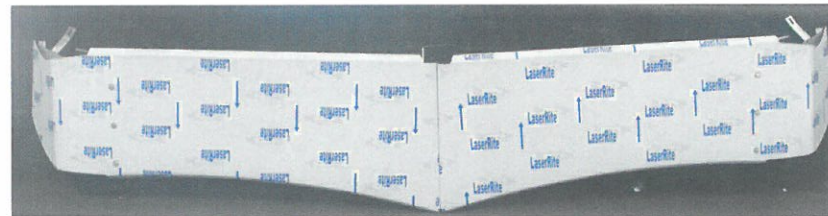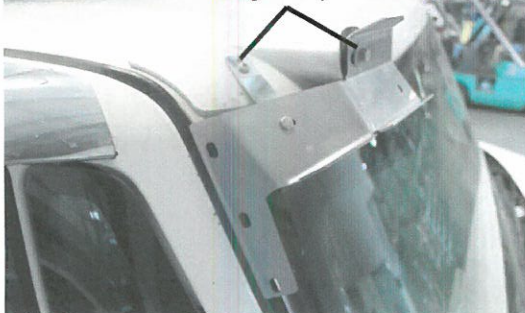

3 Piece Brackets are assembled @ Factory

Inspected By:		Date:		REVISION 5/13
Item	QTY	Description	Size	
①	2	Visor body Halve	13.5" x 35"	
②	2	Outer Visor Brkt DS(3 Part) (VI135003-4, 5ds)	Assembled	
③	2	Outer Visor Brkt PS (3 Part) (VI135003-4, 5ps)	Assembled	
④	1	Center Visor Brkt(VI135003-2)		
⑤	4	Hex Head Bolts	1/4" x 20 x 3/4"	
⑥	12	Truss Head Machine Screws	1/4" x 20 x 3/4"	
⑦	20	Washers	1/4" x 20	
⑧	16	Nylock Nuts	1/4" x 20	

**VI 135003 Gangster Lonestar –(2010-2014)
& Prostar (2008-2014) Visor**

Steps:

1. Remove your factory visor:
 - a) Make sure all hardware is complete.
2. Mount outer brackets to factory holes (re-use bolts – including VI130003-6)
-3 Piece brackets will arrive assembled.
3. Mount Center Bracket to Factory Hole.
4. Mount Visor 1/2s to brackets (Both sides).
5. Mount Visor to center & outer brackets (finger tighten and align).
6. Remove PVC coating.
7. Tighten all bolts securely.
8. Wipe away finger prints with window cleaner.