

VW 130001

Western Star 12" Drop Visor Instructions


Read Entire Instruction Sheet Before Beginning

Safety Glasses	7/16 Box Wrench
Silicone or "Loctite®"	Phillips Head Screw Driver


Steps:

- 1) Remove your current visor:
 - a) You will need to reuse the bolts which go through brackets and ears into the cab (12 bolts).
 - b) Bolt Visor halves together. Make sure to use washers (provided) on both sides of halves when bolting together with center bracket in between.
- 2) Mount Wingmaster (provided) brackets to cab - reusing bolts from step 1.
- 3) Attach Visor body to brackets.
 - a. Align the visor by snugly tightening one of the screws in each mounting bracket. Start from the outside of the cab and work toward the middle, one bolt per bracket at a time.
- 4) Align visor body to brackets as desired and tighten all bolts.
- 5) Remove the PVC coating from the visor.

Western Star 12 " Drop Visor VW130001 2013 - Newer 4700 SF

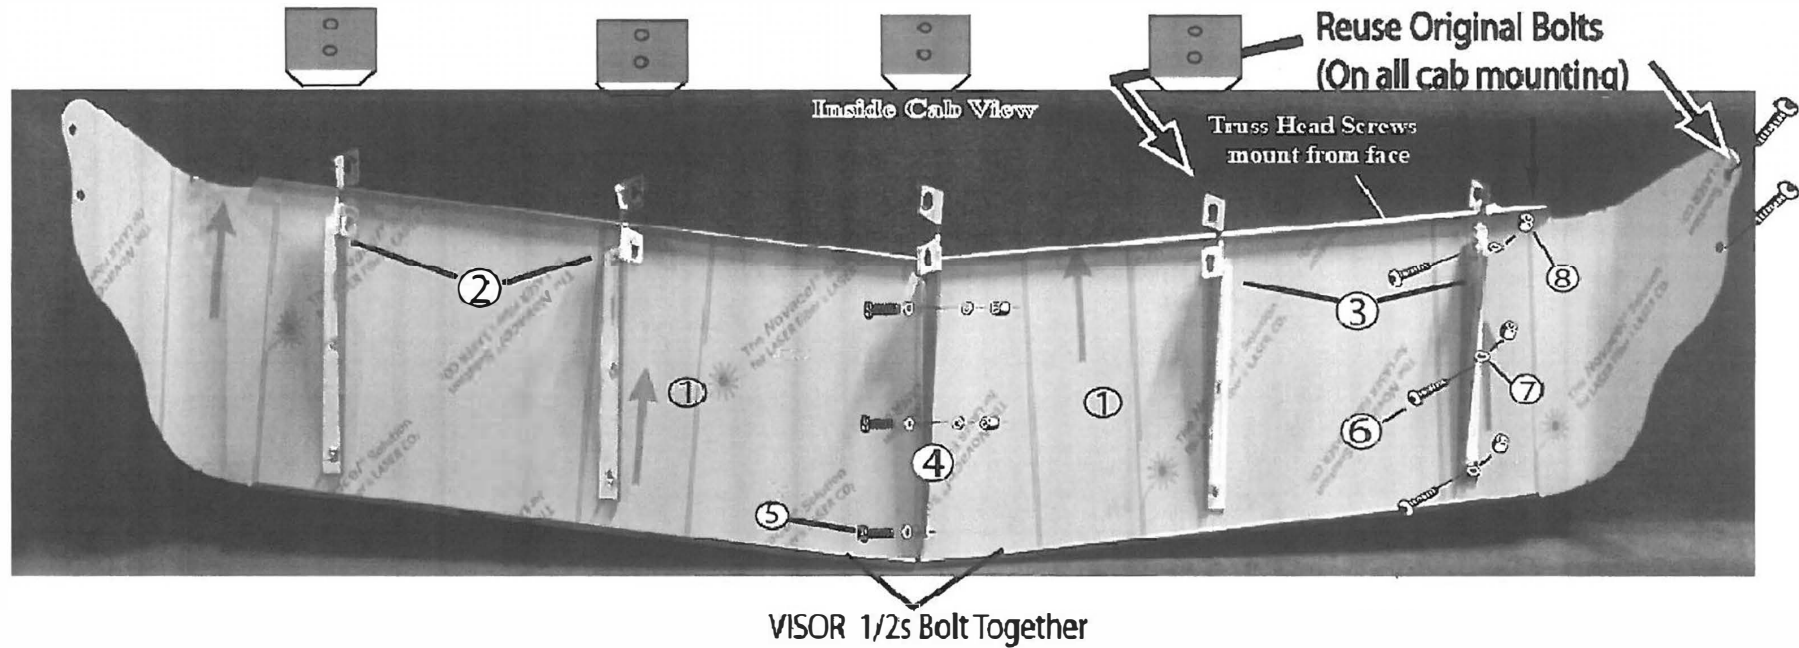

Front View - Mounted

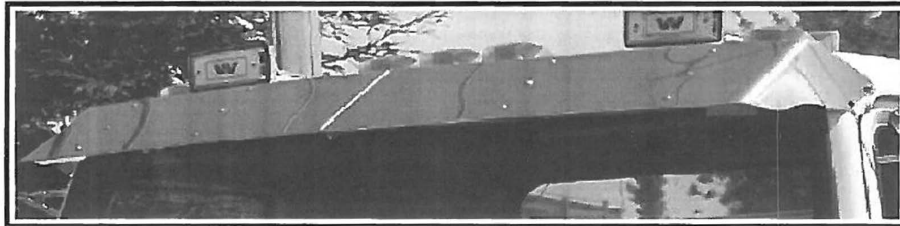

INSPECTED BY:		DATE:	REVISION 10/14
Item	QTY	Description	Size
①	2	Visor body Halve	13.5" x 35"
②	2	Outer Visor Brkt DS (VW 130001-4)	1-1/4 x 13-1/4"
③	2	Outer Visor Brkt PS (VW 130001-3)	1-1/4 x 13-1/4"
④	1	Center Visor Brkt (VW 130001-2)	1" x 14-1/2"
⑤	3	Hex Head Bolts	1/4" x 20 x 3/4"
⑥	14	Truss Head Machine Screws	1/4" x 20 x 3/4"
⑦	22	Washers	1/4" x 20
⑧	17	Nylock Nuts	1/4" x 20
⑨	5	Outer cab plates	3 1/2" x 41/2"