


P-1298


Step 1

Assemble the tank step together "loosely".
Mount the tank step to the tank brackets.
Insert original screws and provided screws. Tighten
by hand.

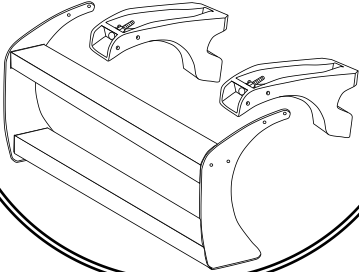



Step 2

Tighten all screws evenly to ensure
proper mounting.

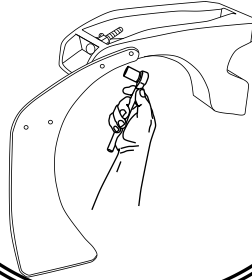

Step 3

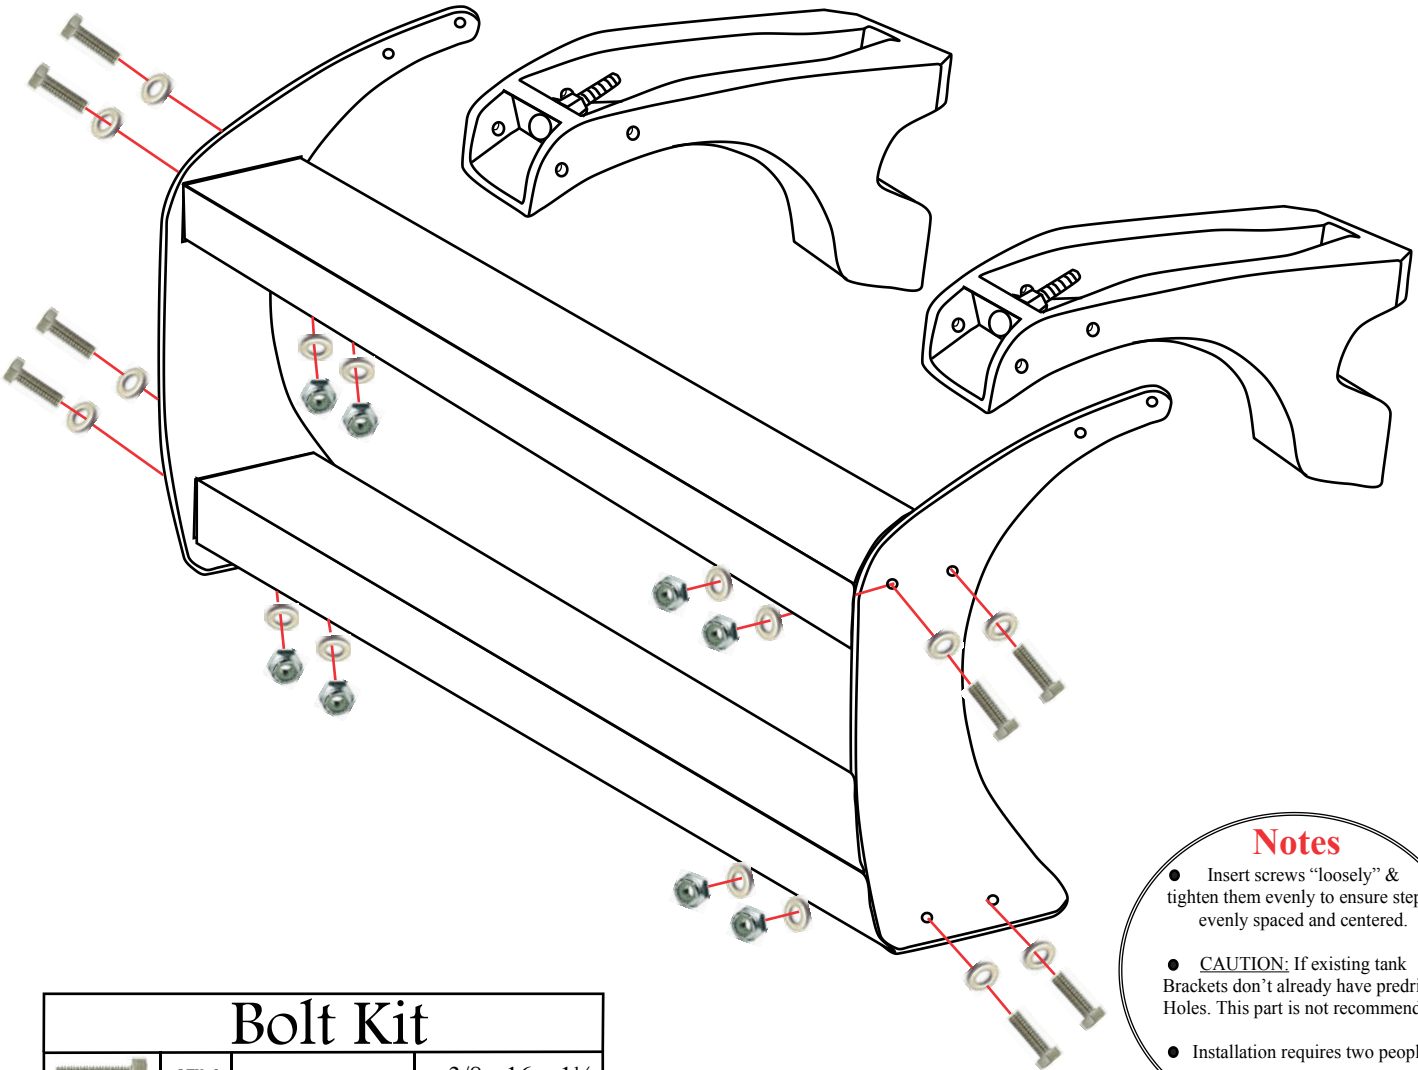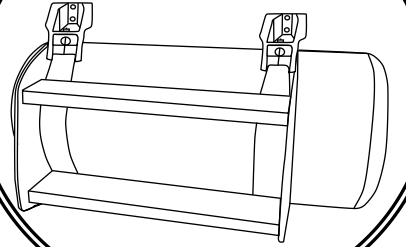


You are done! Clean with windex.



Notes

- Insert screws "loosely" & tighten them evenly to ensure step is evenly spaced and centered.
- **CAUTION:** If existing tank Brackets don't already have predrilled Holes. This part is not recommended.
- Installation requires two people.

Bolt Kit

	QTY: 8	Hex Head	3/8 - 16 x 1 1/4
	QTY: 8	Nylon Hex Nuts	3/8 - 16
	QTY: 16	Flat Washer	3/8