


KENWORTH STANDARD CAB DROPPED VISOR

VK135003 Wicked 14" (W900 2007-Newer)

INSTALLATION INSTRUCTIONS

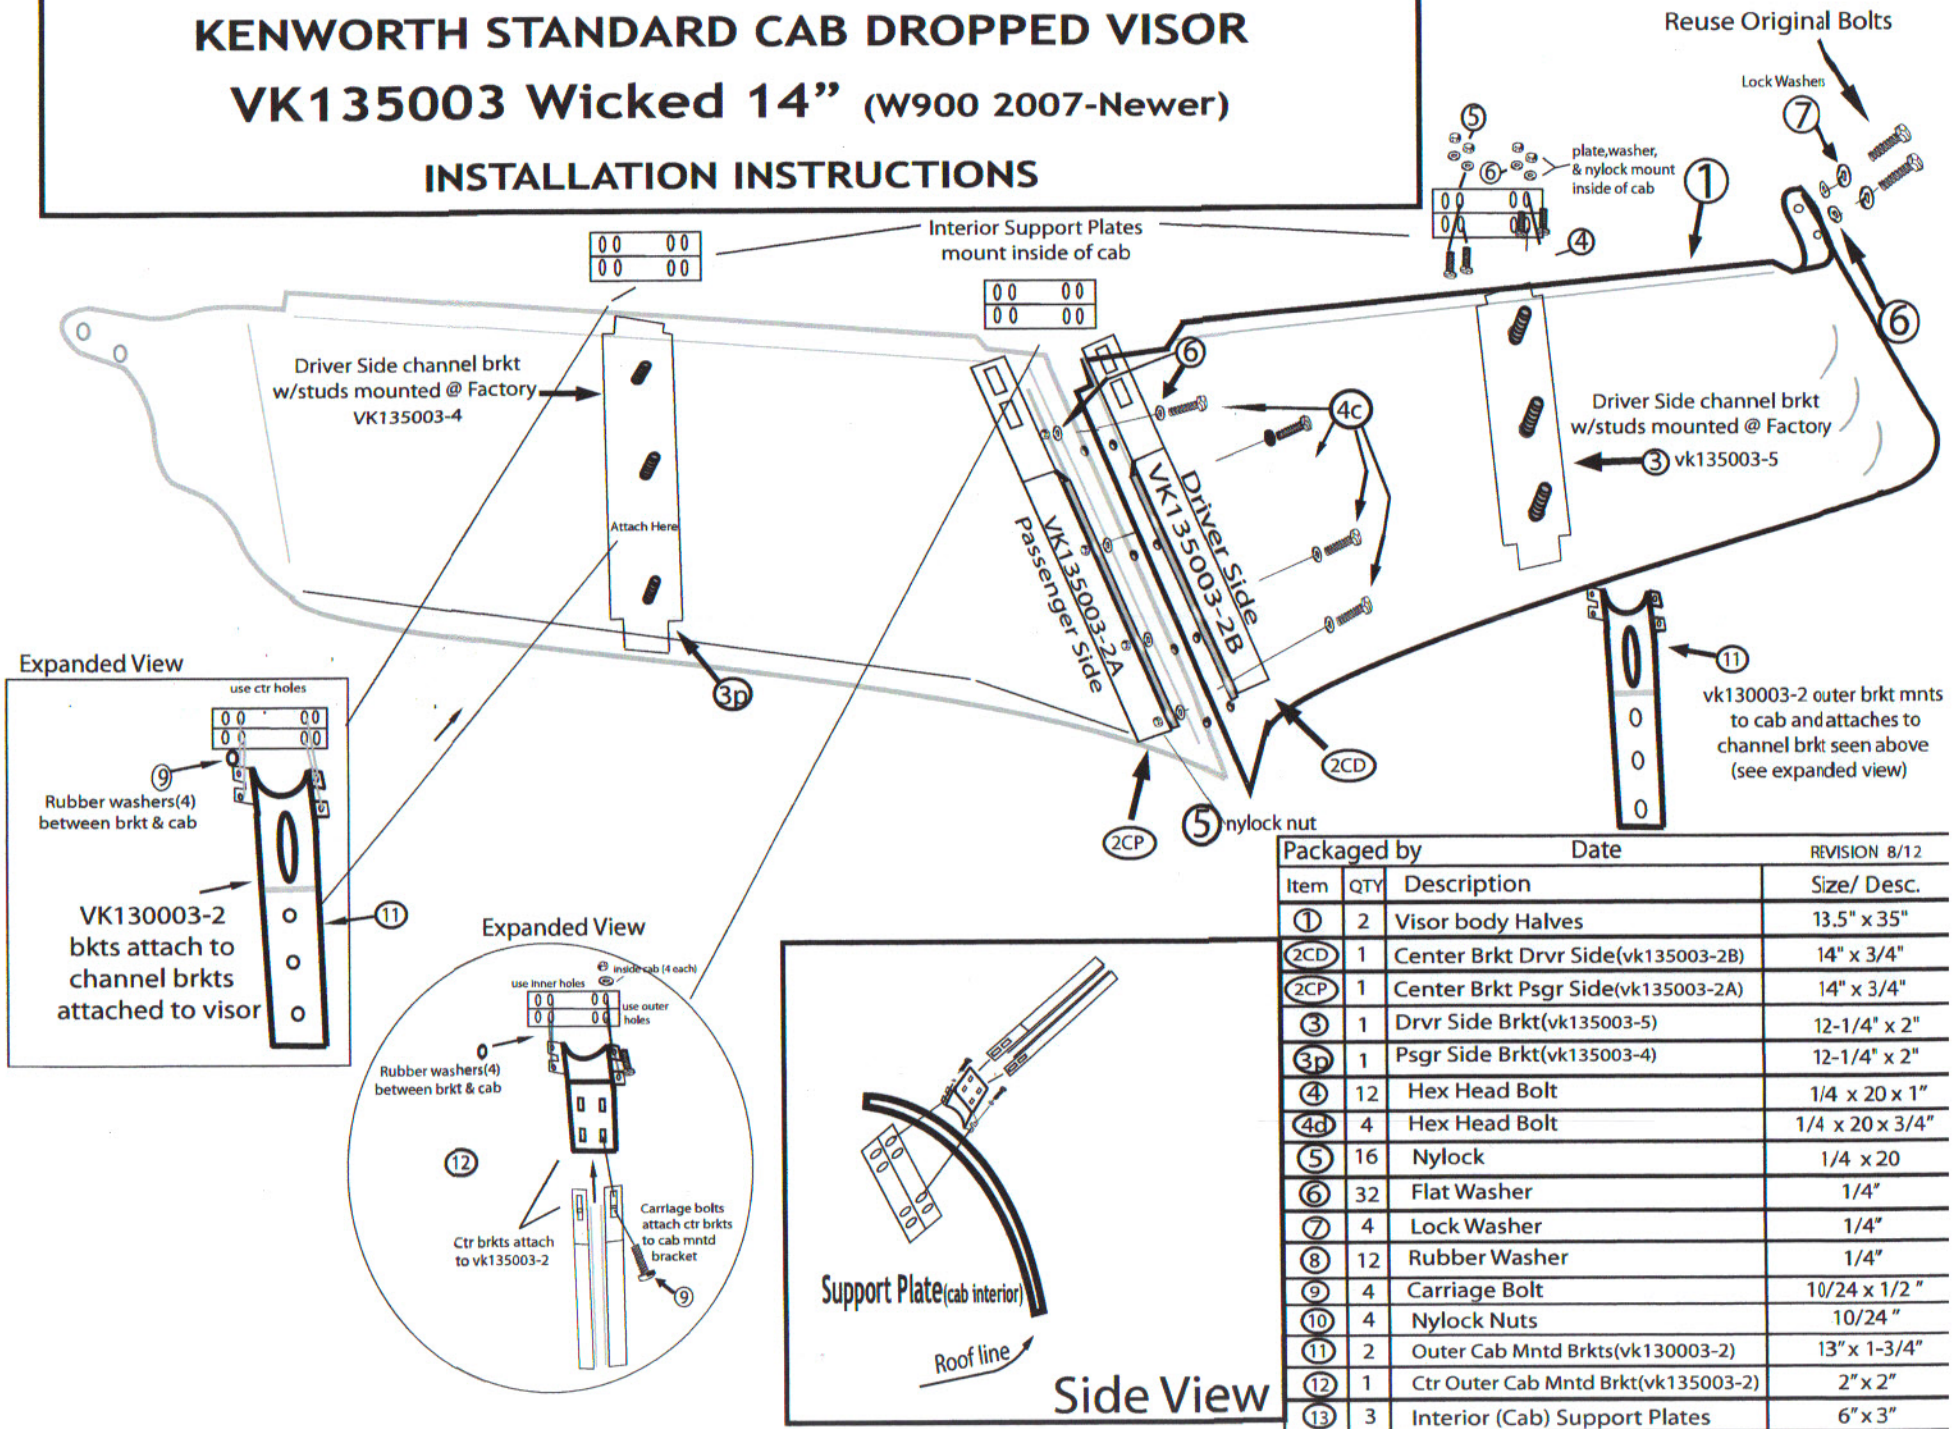

Packaged by		Date	REVISION 8/12
Item	QTY	Description	Size/ Desc.
①	2	Visor body Halves	13.5" x 35"
②CD	1	Center Brkt Drvr Side(vk135003-2B)	14" x 3/4"
②CP	1	Center Brkt Psgr Side(vk135003-2A)	14" x 3/4"
③	1	Drvr Side Brkt(vk135003-5)	12-1/4" x 2"
③p	1	Psgr Side Brkt(vk135003-4)	12-1/4" x 2"
④	12	Hex Head Bolt	1/4 x 20 x 1"
④c	4	Hex Head Bolt	1/4 x 20 x 3/4"
⑤	16	Nylock	1/4 x 20
⑥	32	Flat Washer	1/4"
⑦	4	Lock Washer	1/4"
⑧	12	Rubber Washer	1/4"
⑨	4	Carriage Bolt	10/24 x 1/2 "
⑩	4	Nylock Nuts	10/24 "
⑪	2	Outer Cab Mntd Brkts(vk130003-2)	13" x 1-3/4"
⑫	1	Ctr Outer Cab Mntd Brkt(vk135003-2)	2" x 2"
⑬	3	Interior (Cab) Support Plates	6" x 3"

VK 135003

Kenworth 14" Wicked (W900) Drop Visor Instructions

Read Entire Instruction Sheet Before Beginning

Safety Glasses	10mm Metric Wrench
Grinder	7/16" Wrench
Silicone or "Loctite [®] "	Phillips Head Screw Driver
Masking Tape	Window Cleaner and Paper Towels
1/2" Drill bit	

Steps:

- 1) Bolt visor brackets onto visor body halves.
(vk135003-3 -2B driver's side & vk135003-2A passenger's side).
- 2) Bolt visor halves together using center brackets (vk135003-2b/vk135003-2a).
-Do not tighten completely- You will need adjustment @ later steps.
- 3) Remove your current visor:
Note: You will need to reuse the bolts which go into the side of the cab at the ends of the visor.
- 4) Grind off the heads of the Huck bolts.
 - a) Hold the existing brackets in place and take your time grinding Huck heads. If you grind too fast or hard it will melt the paint around the head. It is recommended that you only grind a little bit at a time.
- 5) Carefully pull down headliner toward front of cab (*interior support plates will mount inside of cab*).
- 6) Install the center & outer brackets onto truck cab per illustration. Once you feel the bolt "bottom out" STOP TIGHTENING. Use support plates inside of cab.
Note: use rubber washers between outer cab bracket and truck cab to prevent damaging cab.
- 7) Install the visor on the truck ends first.
 - a. Screw in a couple of turns the "side of cab bolts" through the holes in the end of the visor.
Use lock washers on bolts at visor end that mount directly to truck cab to prevent loosening due to normal road vibrations.
- 8) Attach outer and center visor brackets to visor body by attaching to brkts w/studs and center brackets which were mounted to visor body in steps 1 & 2.
- 9) Align the visor by snugly tightening the 2 pc brackets together at center bracket location.
- 10) Tighten all bolts securely.
- 11) Remove the PVC coating from the visor.
- 12) Wipe away fingerprints with window cleaner.