
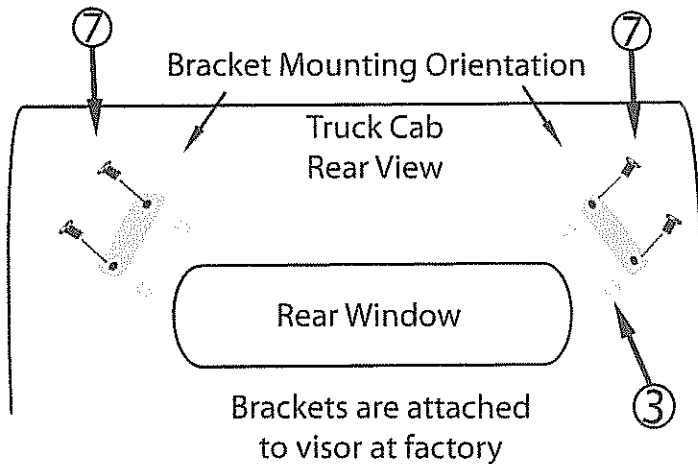


Universal Rear Window Visor VU 193020 - 1 pc INSTALLATION INSTRUCTIONS

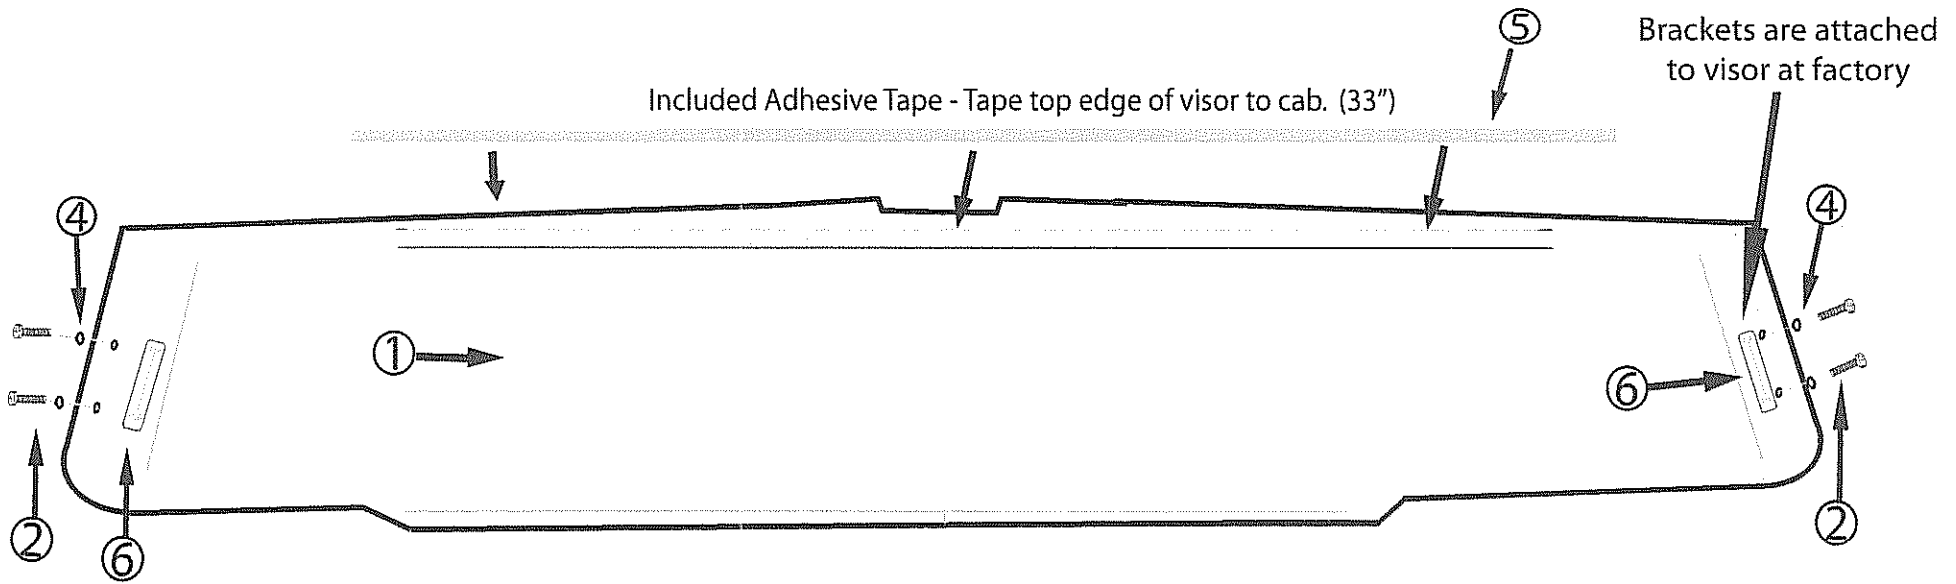

| Item | QTY | Description | Size |
|------|-----|-------------------------------|------------------|
| ① | 1 | Visor body | 23-1/4" x 7-1/2" |
| ② | 4 | Truss Head Screws | 10/32" x 1/2" |
| ③ | 4 | Rubber Welnuts | 1/4"-20 |
| ④ | 4 | Rubber Washers | 1/4" |
| ⑤ | 1 | Adhesive Tape (Tape top edge) | 33" |
| ⑥ | 2 | Mounting Brackets | 4-1/4" x 1-3/4" |
| ⑦ | 4 | Hex Bolts | 1/4-20 x 3/4" |
| ⑧ | 4 | Lock Nuts | 10/32" |

Rear Visor Instructions

Read Entire Instruction Sheet Before Beginning

| | |
|------------------------|----------------------------|
| Safety Glasses | 7/16" Wrench |
| Silicone or "Loctite®" | Phillips Head Screw Driver |
| Center punch | Marking Pen |
| Drill | 1/4" Drill Bit |
| | |

Steps:

- 1) Remove your new visor from packaging:
 - a) Review all hardware.
- 2) Bolt outer brackets (included) onto rear visor body.
 - a) Brackets are bolted on to visor using 10/32" truss head screws and Nylock nuts.
- 3) Hold visor up to cab body, and mark bracket holes on cab. Additional person is helpful to hold in place while marking holes to be drilled.
- 4) Drill with 1/4" drill bit (where marked in step 3).
- 5) Insert 1/4" wellnuts into drilled holes.
- 6) Once well nuts are in place, remove tape from visor edge, hold up to truck on bolt on brackets.
- 7) As brackets are tightened the wellnuts will flatten out to create a tight seal.
- 8) Remove the PVC coating from the visor.